

August 1, 2019


Warrior Handheld Tandem Receiver/Dual Trolley-Hoist Operation Instructions

Power-On/Receiver Select Mode


1. Press the Stop button (**B1**) to turn the transmitter on.



2. The transmitter automatically enters *Receiver Select* mode, indicated by the radio frequency (RF) LED lighting solid and the **A** and **B** LEDs flashing:

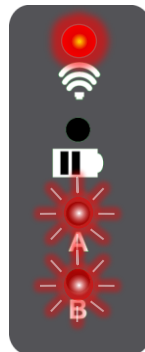

3. Press the RX1/RX2 button (B9) to toggle between the three receiver (RX) select options illustrated below:

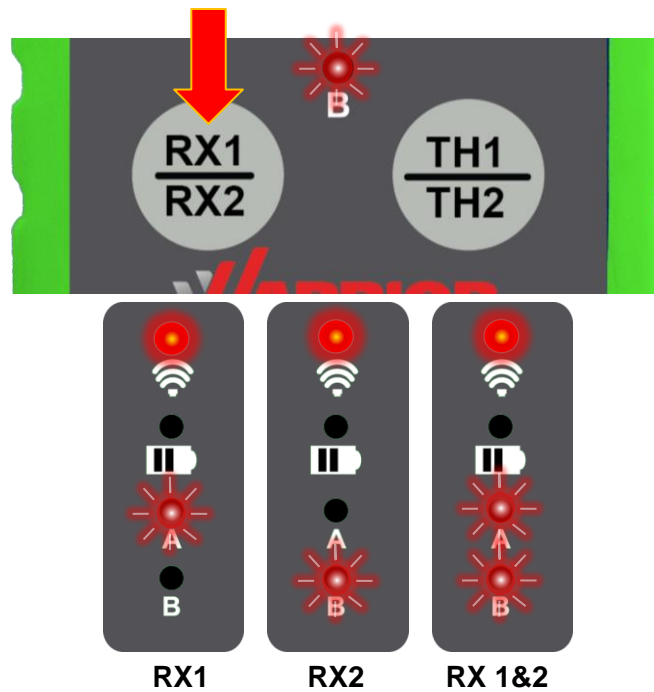

✓ **Note:** *Flashing LEDs always indicate that the transmitter is in Receiver Select mode.*

4. Press the green horn/start button (B2) to activate your preferred selection.




The system launches into *Operational Mode*, as the rapidly blinking RF LED indicates.

A white strobe LED on each receiver flashes when that receiver is linked to the transmitter.




✓ **Note:** All pushbutton functionality is disabled while in Receiver Select mode.


- Once in *Operational Mode*, you can toggle between trolleys-hoists by pressing the Trolley-Hoist select button (**B10**).

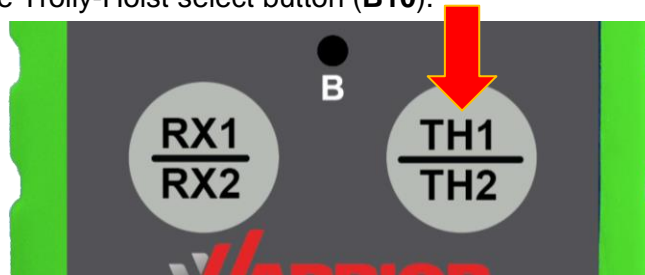

The **A** and **B** LEDs light solid to indicate which trolley-hoist is currently operating. The available choices are illustrated below:

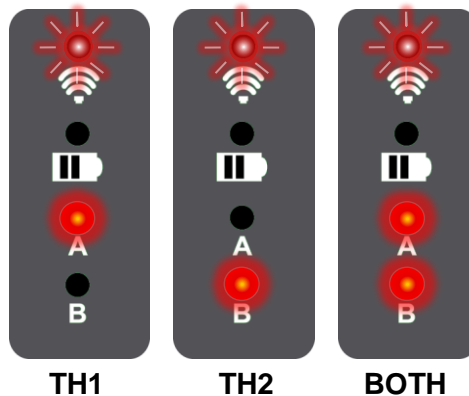


To return to *Receiver Select* mode at any time, press the RX1/RX2 button (**B9**).

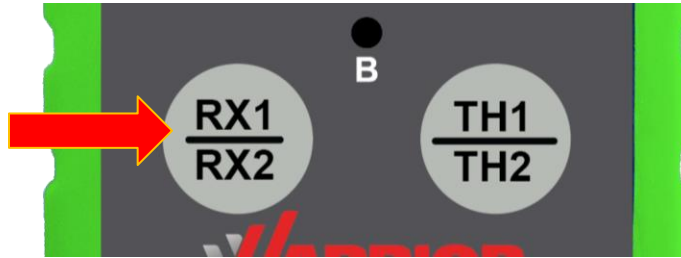

Summary

1. When the **A** and **B** LEDs flash, you are in *Receiver Select* mode, and all output functionality is disabled.

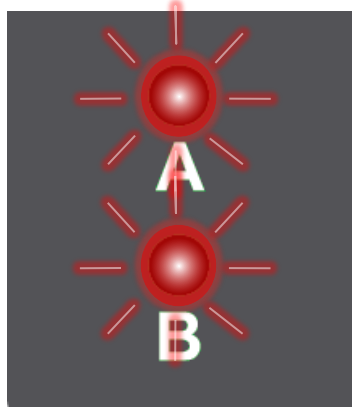

2. Once you select a receiver and launch into *Operation Mode*, the **A** and **B** LEDs indicate the trolley/hoist selection and light solid.

