


RADIO RECEIVER ENCLOSURE

9 - 36 VDC
OR
10 - 28 VAC

CONTROL CABLE
6 FEET MAX

CONTACT RATINGS:
"MLC" RELAY: 8 AMPS @ 250 VAC
CONTROL RELAYS: 8 AMPS @ 250 VAC

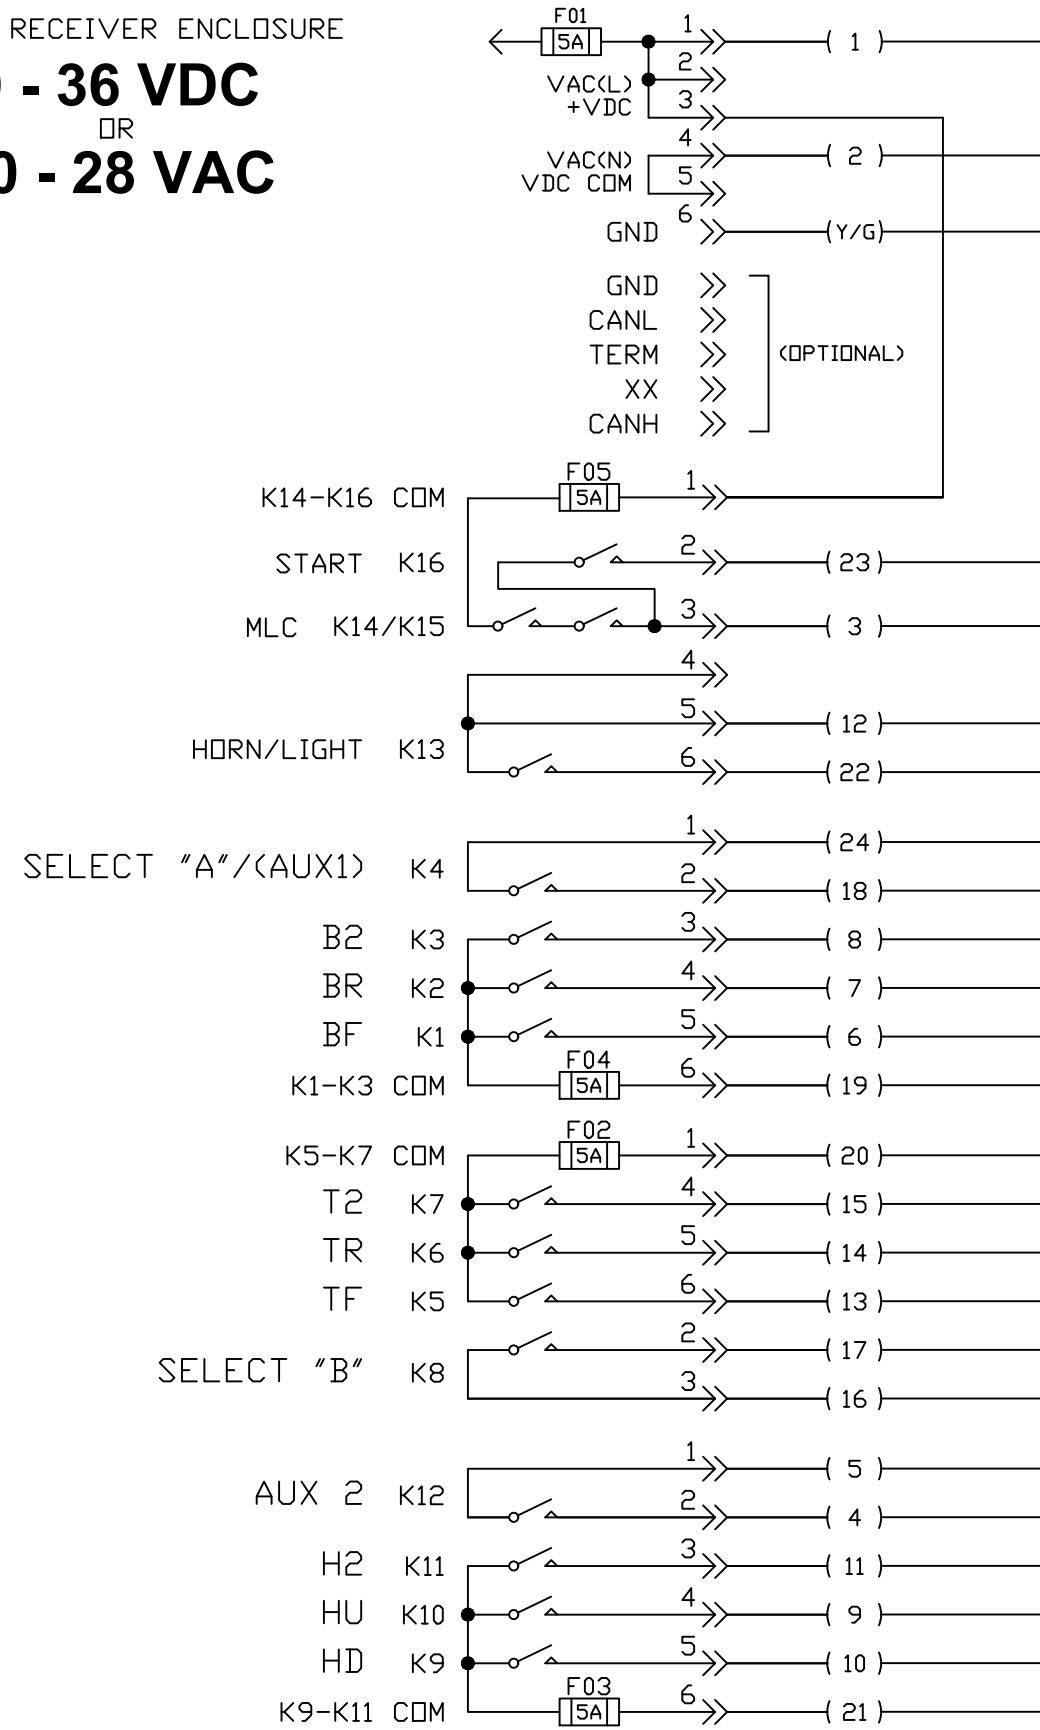

PIGTAIL WIRING DESIGNATION

- (1) → LOW VDC/VAC IN - or TRANSFER SWITCH
- (2) → LOW VDC/VAC COMMON
- (3) → MLC - or TRANSFER SWITCH
- (4) → AUX 2
- (5) → K12 COMMON
- (6) → BF
- (7) → BR
- (8) → B2
- (9) → HU
- (10) → HD
- (11) → H2
- (12) → HORN/LIGHT COMMON ①
- (13) → TF
- (14) → TR
- (15) → T2
- (16) → K8 COMMON
- (17) → SELECT "B"
- (18) → SELECT "A" / AUX1
- (19) → K1-K3 COMMON
- (20) → K5-K7 COMMON
- (21) → K9-K11 COMMON
- (22) → HORN/LIGHT "NO" ①
- (23) → START ②
- (24) → K4 COMMON

- ① K13 WIRES (12) & (22) MUST BE WIRED TO THE CRANES WARNING DEVICE FOR PROPER OPERATOR WARNING AND ANNUNCIATION DURING THE TX ASSOCIATION PROCESS.
- ② FOR USE IN APPLICATIONS WHERE ISOLATED START CONTROLS ARE REQUIRED. DURING COMMANDED FUNCTIONS THIS WIRE WILL HAVE A 120 VAC POTENTIAL ACROSS IT. TERMINATE WIRE ACCORDINGLY.
- ③ RELAYS ARE SHOWN IN DEFAULT MODE (00), REFER TO PG.5 FOR OPTIONAL RELAY SETTINGS.

-- REVISIONS --

NO.	DATE	DESCRIPTION
0-0	05.30.18	DRAWING ISSUED FOR PRODUCTION.
1-0	03.23.21	UPDATED ASSOCIATION PROCEDURE & MODEL NUMBERS. -GFM
2-0	07.27.22	UPDATED DRAWING TO LATEST STANDARD. -GFM

WARRIOR 32-2-LVU

CUSTOMER: CERVIS, INC.

DESCRIPTION: MU-9X15-HVA RX WITH PRE-WIRED PIGTAIL

ASSEMBLY #15104501

DRAWN: ECJ

ENGINEER: GFM

SCALE: N/A

SHEET: 1 OF 5

SIZE: B

DWG NO.




#A100030

REV:

2-0



HH2S-9XW10

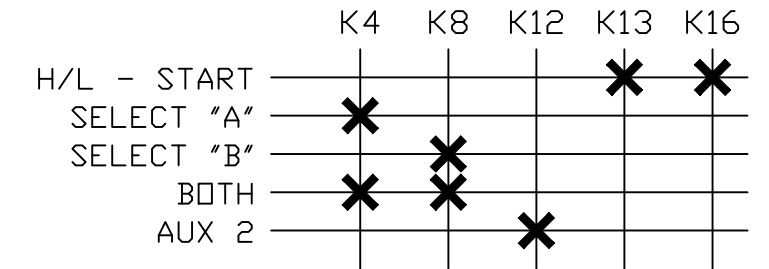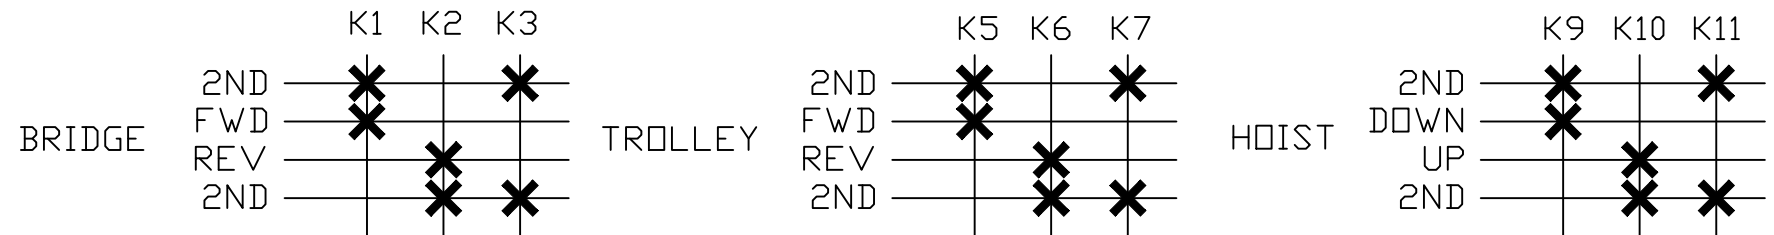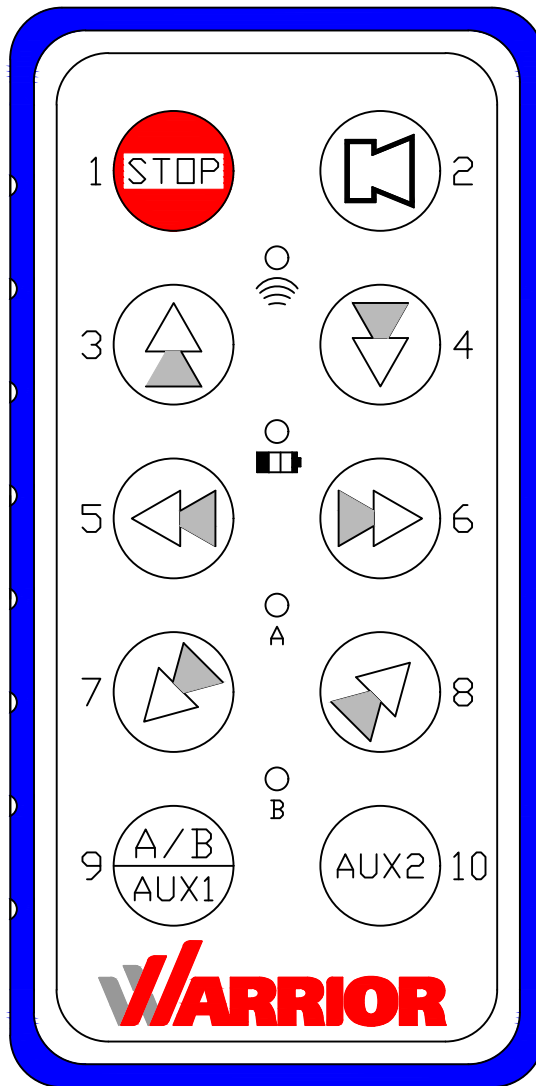

STOP
 HOIST UP
 TROLLEY REV
 BRIDGE REV
 T/H SELECT/
 AUX 1

H/L - START
 HOIST DWN
 TROLLEY FWD
 BRIDGE FWD
 AUX 2

START PROCEDURE:

1. PRESS BUTTON 1 (STOP) TO "WAKE" HH.
2. PRESS BUTTON 2 (H/L - START) TO ENERGIZE THE "MLC" RELAY.

STOP:

1. PRESS BUTTON 1 (STOP) TO DE-ENERGIZE "MLC" RELAY & ALL OTHER OUTPUTS.

PROGRAMMING NOTES:





1. FIRST COME - FIRST SERVE SOFTWARE.
2. PRESS T/H SELECT (B9) TO ENERGIZE THE SELECT RELAYS:
 * "A" SELECT = (K4), "B" SELECT = (K8), or BOTH..
 ** LED'S WILL INDICATE SELECTION MADE
3. IN CERTAIN MODES B9 ACTS AS AN AUX FUNCTION (SEE PG. 5).

LED 1 = RADIO TX/RX
 LED 2 = BATT
 LED 3 = SELECT "A"
 LED 4 = SELECT "B"

ASSOCIATION PROCEDURE	
1. PRESS THE STOP PB.	
2. WHILE LED B IS ON PRESS B9 & B10 SIMULTANEOUSLY.	
3. WHILE LED'S ARE SCROLLING: PRESS B3 & B4 SIMULTANEOUSLY (HOLD FOR 5 SEC'S)	
LED A WILL START TO BLINK INDICATING ASSOCIATION MODE.	
4. USE B9 TO SEARCH FOR THE TARGET RX.	
5. USE B10 TO SELECT THE TARGET RX.	
6. ID CLEAR (WHILE IN MM): B9 & B10 (SIMULTANEOUSLY) + STOP	


CUSTOMER: CERVIS, INC.			
DESCRIPTION: WARRIOR HH2S-9XW10			
ASSEMBLY #15100511			
DRAWN: ECJ	SCALE: N/A	SHEET: 2 OF 5	SIZE: B
ENGINEER: GFM		DWG NO. #A100030	REV: 2 - 0

<XX> - PIGTAIL WIRE NUMBERS

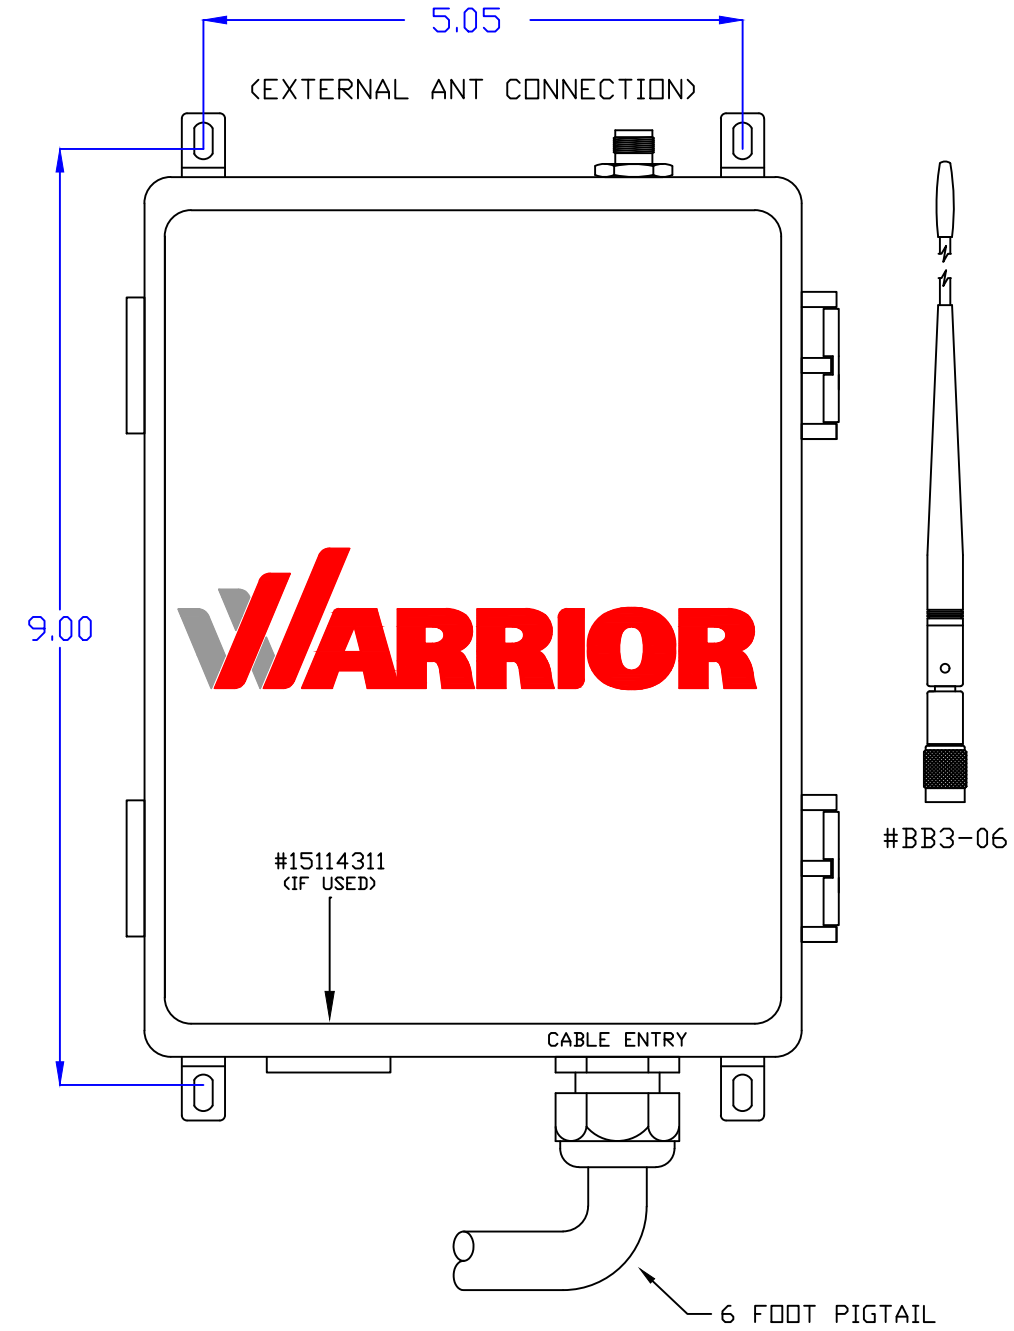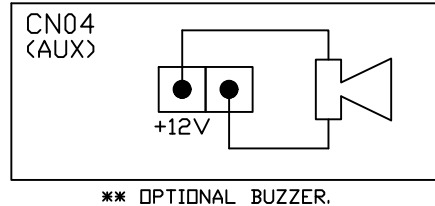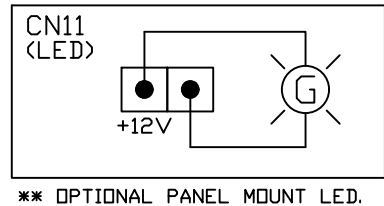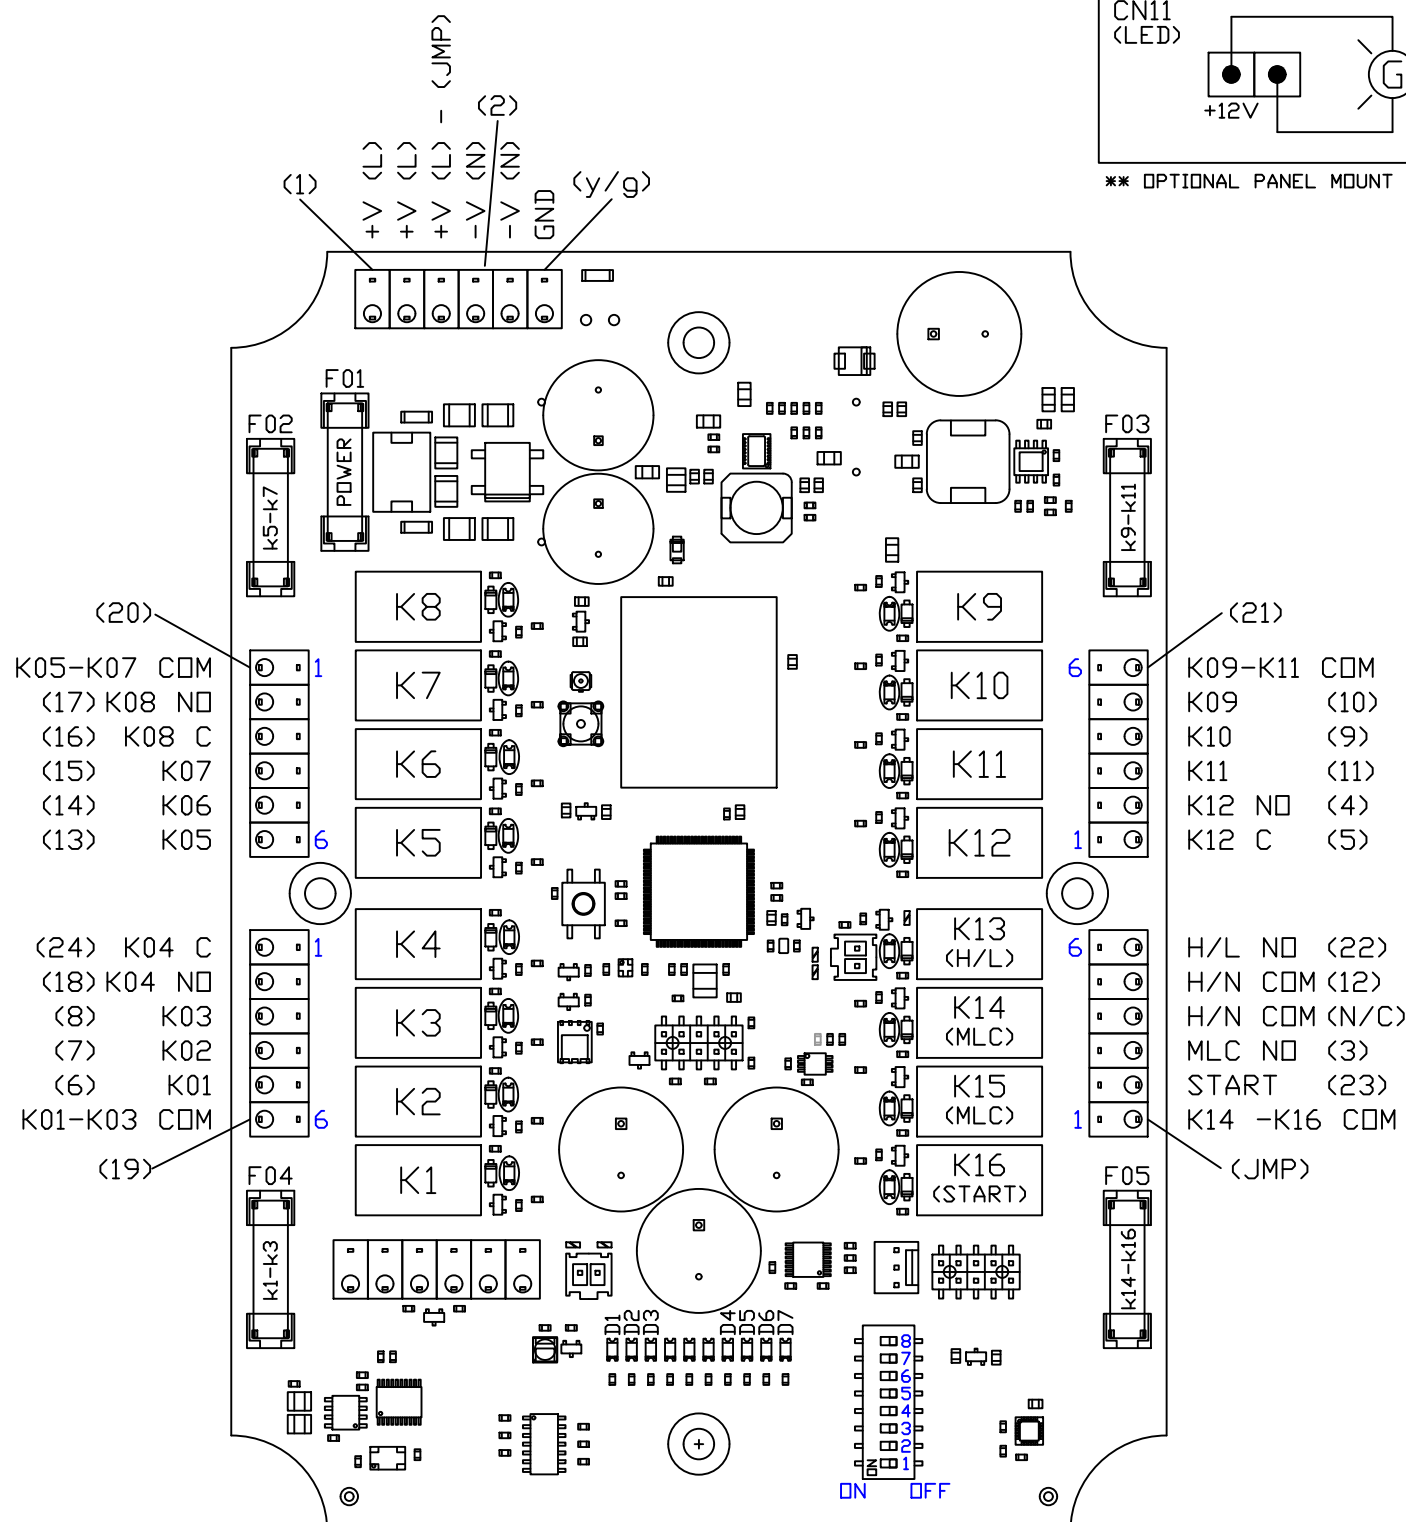

DIAGNOSTIC LED'S:

D1	HEALTH/OPERATIONAL
D2	TX
D3	RX
D4	LOGIC 3.3V
D5	SYSTEM 3.3V
D6	RF 3.3V
D7	SYSTEM 12V

 


1. DIP SWITCHES SHOWN IN DEFAULT MODE <00>.
2. DIP SWITCH 8 SHOULD BE "OFF" WHEN THE SYSTEM IS SHIPPED.

"PCB LAYOUT"

CUSTOMER: CERVIS, INC.					
DESCRIPTION: BOARD/ENCLOSURE DETAILS					
DRAWN: ECJ	SCALE: N/A	SHEET: 3 OF 5	SIZE: B	DWG NO. #A100030	REV: 2-0
ENGINEER: GFM					

CERVIS RADIO RECEIVER

TYPICAL MAINLINE

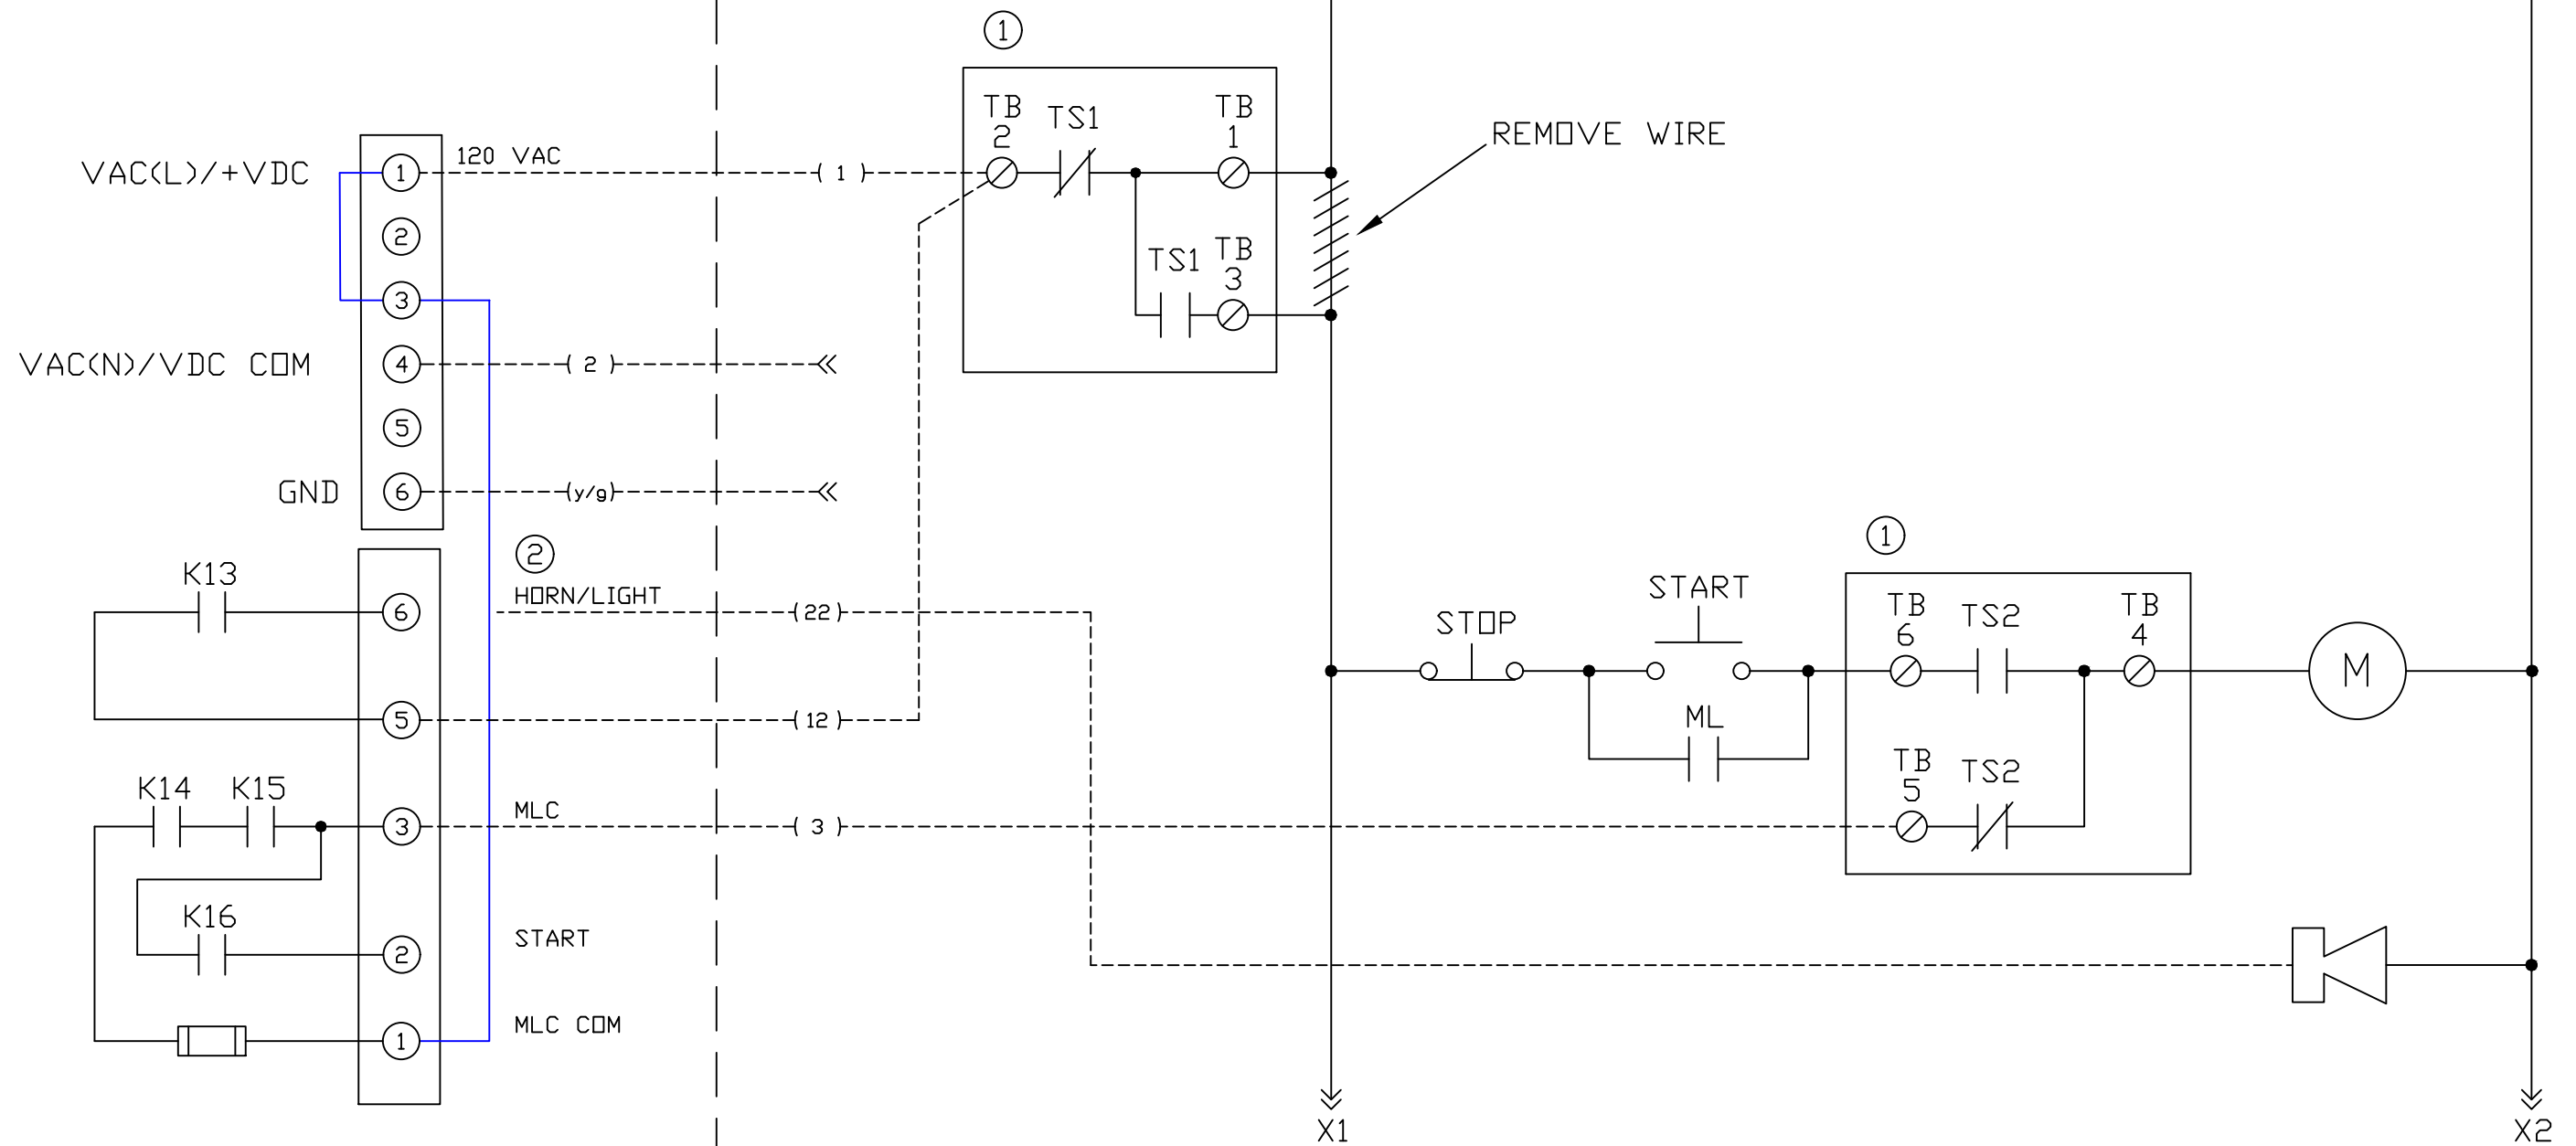


- ① TRANSFER SWITCH SHOWN IN "RADIO" MODE - FOR REFERENCE ONLY. TRANSFER SWITCH IS SUPPLIED BY CUSTOMER.
- ② TYPICAL WIRING OF THE HORN/LIGHT (ASSOCIATION) RELAY. FOR PROPER OPERATOR WARNING AND ANNUNCIATION DURING THE TX ASSOCIATION PROCESS.

CUSTOMER: CERVIS, INC.					
DESCRIPTION: TYPICAL MAINLINE INTERFACE					
DRAWN: ECJ	SCALE: N/A	SHEET: 4 OF 5	SIZE: B	DWG NO. #A100030	REV: 2 - 0
ENGINEER: GFM					

"MU" DIP SWITCH -- SW01 --

1	2	3	4	5	6	7	** 8
MODE		A-B BOTH/OFF	A-B CYC/IND	A-B MOM/LAT	AUX MOM/LAT	UNUSED	ASSOCIATION

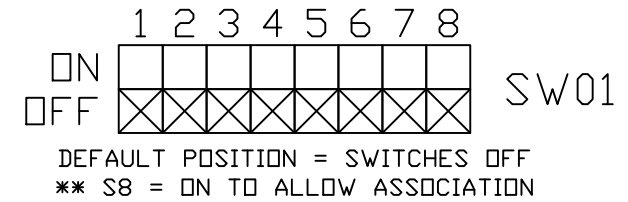

APPLIES TO ALL MODES & ALL TX TYPES

MODE (SWITCHES 1 & 2)		
0	0	3-MOTION; BR-TR-HOIST 3-RELAY; A/B & AUX RELAYS.
0	1	3-MOTION; BR-TR 3-RELAY; HOIST 4-RELAY; A/B RELAYS; NO AUX.
1	0	3-MOTION; BR-TR-HOIST 4-RELAY; NO A/B or AUX RELAYS.
1	1	4-MOTION; BR-TR-HOIST-4TH, 3-RELAY; NO A/B or AUX RELAYS.

** IN MODES '00' & '01' K4 IS AVAILABLE FOR AN AUX OUTPUT (BASED ON SWITCH 4).

APPLIES TO ALL MODES & ALL TX TYPES

"A-B BOTH / OFF" (SWITCH 3)		
	RELAY OPERATION	MCB NOTES
0	CYCLES: A, B, BOTH, A, B, BOTH	S1 MIDDLE = BOTH
1	CYCLES: A, B, OFF, A, B, OFF	S1 MIDDLE = OFF

APPLIES ONLY TO HH2S; HHMS. APPLIES TO MODES 00 or 01.

"A-B CYCLE / INDEPENDENT" (SWITCH 4)		
	RELAY OPERATION	MCB NOTES
0	HH: BUTTON 9 CYCLES A/B RELAYS (see A-B BOTH/OFF SWITCH)	MCB: NO EFFECT
1	HH: BUTTON 9 ACTIVATES RELAY K4 "A" (see A-B MOM/LAT SWITCH)	MCB: NO EFFECT
	HH: BUTTON 10 ACTIVATES RELAY K12 "B" (see A-B MOM/LAT SWITCH)	

APPLIES ONLY TO HH2S; HHMS. APPLIES TO MODES 00 or 01.
ONLY APPLIES IF A-B CYC/IND = 1.

"A-B MOM / LATCH" (SWITCH 5)		
	RELAY OPERATION	MCB NOTES
0	A & B ARE MOMENTARY OUTPUTS	MCB: NO EFFECT
1	A & B ARE LATCHING OUTPUTS	MCB: NO EFFECT

APPLIES ONLY IN MODE 00 AND WHEN A-B CYC/IND = 0 (or 10 BUTTON WON'T WORK)

"AUX MOM / LATCH" (SWITCH 6)		
	RELAY OPERATION	MCB NOTES
0	AUX RELAY IS MOMENTARY	S7 UP = AUX
1	AUX RELAY IS LATCHING	S7 UP = AUX

** AFTER ANY DIP SWITCH CHANGE, POWER OFF TRANSMITTER. ONCE TX IS TURNED BACK ON, RELAY CONFIG WILL CHANGE.

MU RELAY OUTPUT ASSIGNMENT (BASED ON DIP SW SETTINGS)																
MODE	K1	K2	K3	K4	K5	K6	K7	K8	K9	K10	K11	K12	K13	K14	K15	K16
00	BF	BR	B2	A	TF	TR	T2	B	HD	HU	H2	AUX	H/L	MLC	MLC	STRT
01	BF	BR	B2	A	TF	TR	T2	B	HD	HU	HD2	HU2	H/L	MLC	MLC	STRT
10	BF	BR	BF2	BR2	TF	TR	TF2	TR2	HD	HU	HD2	HU2	H/L	MLC	MLC	STRT
11	BF	BR	B2	4th-R	TF	TR	T2	4th-F	HD	HU	H2	4th-2	H/L	MLC	MLC	STRT

H/L = HORN/LIGHT (ASSOCIATION) RELAY.
XX = NO OUTPUT.
MLC = "MLC" RELAY - MAINLINE CONTACTOR

STRT = START RELAY.
N/A = NOT AVAILABLE.

CUSTOMER: CERVIS, INC.		
DESCRIPTION: WARRIOR DIP SWITCH SETTING CHART		
DRAWN: ECJ	SCALE: N/A	SHEET: 5 OF 5
ENGINEER: GFM	SIZE: B	
DWG NO. #A100030		REV: 2 - 0